## Instructions for:

RW3-RW6-SW6 Fixtures

## **IMPORTANT!**

When using electrical equipment, basic safety precautions must be followed:

Service must be performed by qualified service personnel.


Do not use product for other than intended use.

Do not install this product near gas or electric heaters.

### RW3/RW6/SW6 Surface Mounted Installation Instructions


- 1. Remove lens retaining screws on either side of the fixture housing to remove the lens.
- 2. Disconnect power to all LED boards by depressing each board connector's latch and pulling away.
- 3. Remove wireway cover retaining screws, one at each corner, and remove the wireway cover.
- 4. Punch out all housing wire access knockout(s) that are going to being used.
- 5. Secure fixture to the mounting surface using the housing's mounting holes.
- 6. Wire fixture in accordance with NEC and local code requirements.
- 7. Re-install all removed components.

#### **RW3** Installation

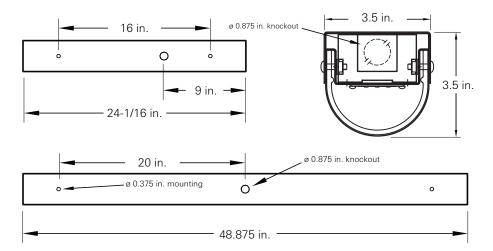

Dimensions are subject to change without notice. Any additional instructions present on or within the fixture supersede these instructions.

## **RW6 Installation**

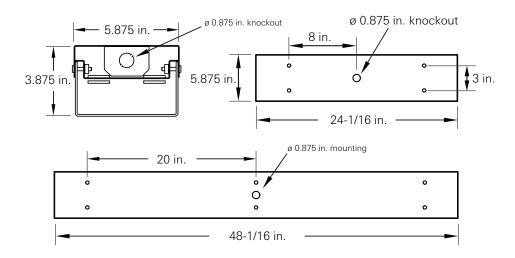

# **SW6** Installation

